

## Specifications

### Amplifier section

Power output 4 $\Omega$ (watts)	200W X 1
Power output 2 $\Omega$ (watts)	350W X 1
Power output 1 $\Omega$ (watts)	480W X 1
THD	$\leq 1\%$
frequency response ( $\pm 1$ dB )	20Hz~250Hz
signal to noise ratio	>95dB
sensitivity	0.15~8V
recommended fuse type	30A X 2
dimensions	303mm X 214mm X 49mm



# GAS

## CAR AUDIO

### BEAT 500.1

## OWNER'S MANUAL

— CAR AUDIO SYSTEM —  
PLEASE READ CAREFULLY BEFORE INSTALLING  
OR OPERATE THIS UNIT



Features and specifications subject to change and/or improvement without notice





### WARNING

Make sure you choose a suitable place to mount the unit. The position should be completely dry with a good circulation of air, and from a mechanical point of view very stable.

# System planning

Proper system planning is the best way to maximize your amplifier performance. By planning your installation carefully you can avoid situations where the performance of the reliability of your system is compromised. Your authorized dealer has been trained to maximize your system's sonic potential. Your dealer is a valuable resource in helping you with your system design and installation.

Most speakers designed for car audio operation are 4 Ω impedance. Connecting two such speakers in parallel will result in a 2 Ω impedance load as seen by the amplifier. Some subwoofer models feature a dual 4 Ω voice coil design. Connecting these voice coils in parallel will result in a 2 Ω nominal impedance.

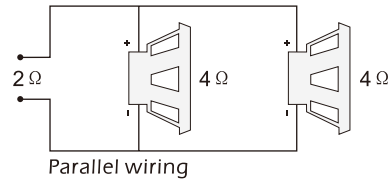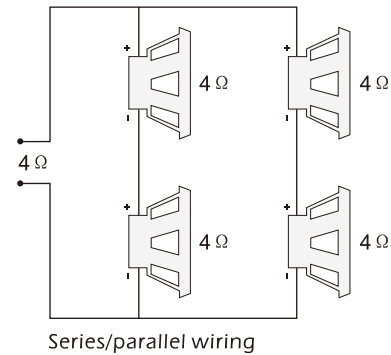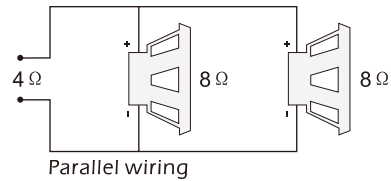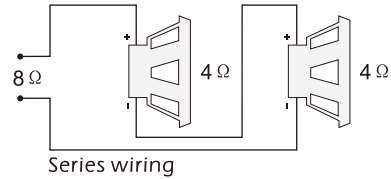


Symptom	possible cause	action to take
	internal crossover not set properly for speaker	reset crossovers referring to the multi-cross crossover configuration section of this manual
<b>distorted output (cont'd)</b>	speakers are blown	check system with known working speakers and repair or replace as needed
<b>poor bass response</b>	speakers wired wrong polarity causing cancellation at low frequencies	check speaker polarity and repair as needed
	crossover set incorrectly	reset crossovers referring to the multi-cross crossover configuration section of this manual for detailed instructions
<b>battery fuse blowing</b>	impedance load to amplifier too low	check speaker impedance load, if below 2 Ω stereo or 4 Ω mono rewire speakers to achieve a higher impedance
	short in power wire or incorrect power connections	check power and ground connections and repair as needed
	fuse used is smaller than recommended	replace with proper fuse size
	too much current being drawn	check speaker impedance load, if below 2 Ω stereo or 4 Ω mono rewire speakers to achieve a higher impedance
	short in power wire or incorrect	check power and ground connections and repair as needed
<b>amplifier fuse blowing</b>	too much current being drawn	check speaker impedance load, if below 2 Ω stereo or 4 Ω mono rewire speakers to achieve a higher impedance and replace with recommended fuse size
		check power and ground connections and repair as needed
	fuse used is smaller than recommended	replace with proper fuse size

# Troubleshooting

symptom	possible cause	action to take
no output	low or no remote turn-on input	check remote turn-on voltage output at amplifier and correct as needed
	fuse blown	check power wire integrity and reversed polarity ,repair as needed and replace fuse
	power wires not connected	check power wire and ground connections and repair of replace as needed
	audio input not connected or no output from source	check input connections and signal integrity , repair or replace as needed
audio cycles on and off	speaker wires not connected	check speaker wires and repair or replace as needed
	speakers are blown	check system with known working speaker and repair or replace speakers as needed
	thermal protection engages when amplifier heatsink temperature exceeds 90°C	make sure there is proper ventilation for amplifier and improve ventilation as needed
distorted output	loose or poor audio input	check input connections and repair or replace as needed
	amplifier level sensitivity set too high; exceeding maximum output capability of amplifier	reset gain referring to the tuning section of the manual for detailed instructions
	impedance load to amplifier too low	check speaker impedance load if below 2 Ω stereo or 4 Ω mono rewire speakers to achieve a higher impedance
	shorted speaker wires	check speaker wire connections and repair or replace as needed
speaker not connected to amplifier properly	check speaker wiring and repair of replace as needed refer to the installation section of this manual for detailed instructions	

# Power Connection Leads

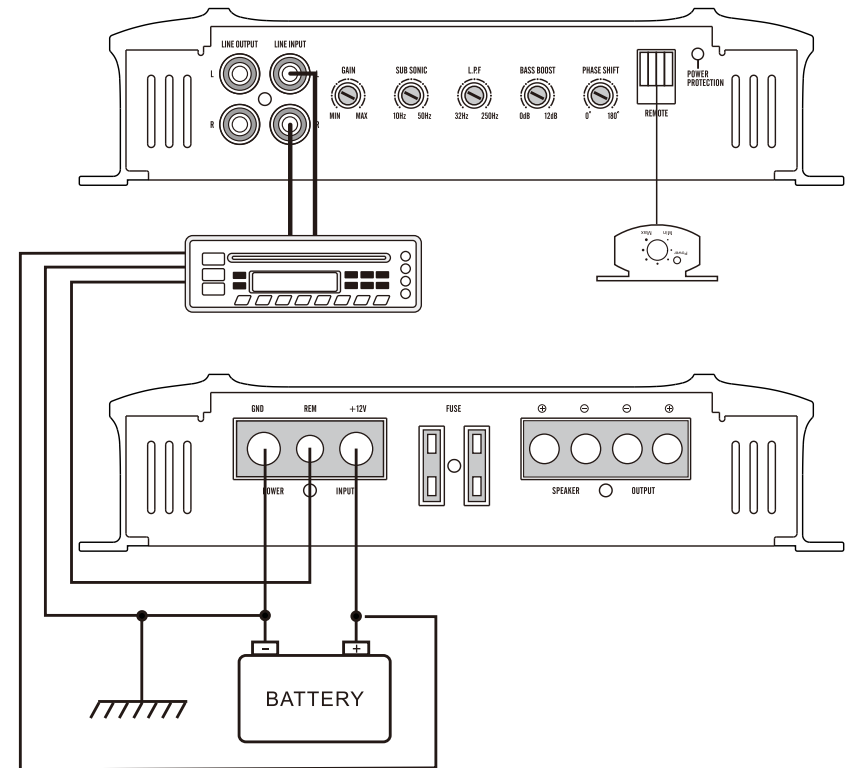



## Notes on the power supply

Connect the +12V power input lead only after all other leads have been connected. Be sure to connect the ground wire of the unit securely to a metal part of the car. A loose connection may cause a malfunction of the amplifier.

REMOTE: The unit is turned on by applying +12Volts to this terminal. This terminal does not draw heavy current like the two power terminals so a thinner connecting wire is acceptable. Standard 18 GAUGE is fine and the standard colour is yellow. If the radio is equipped with a power antenna control wire, it can drive this terminal. If the power antenna wire is already in use, you can still splice into it. With this method, the unit will turn on automatically with the radio. Use the power supply lead with a fuse attached whose value is the same as original fuse.

Place the fuse in the power supply lead as close as possible to the car battery. During a full power operation, Maximum current will run through the system. Therefore, Make sure that the leads to be connected to the +12v and GND terminals of the unit respectively must be larger than 10-Gauge (AWG.10).

system 1 2 channel mode

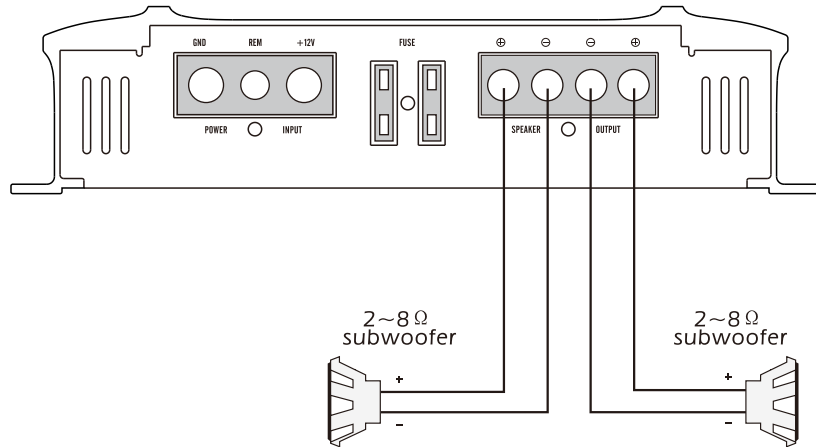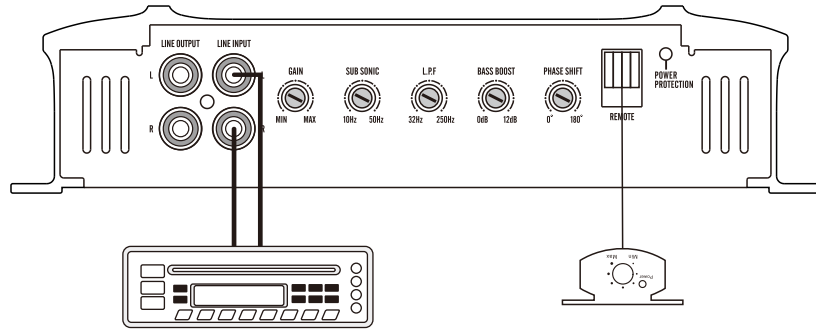

system 1 1 channel mode

